

www.moree.de

Moree Germany GmbH
Kaiserswerther Markt 11
40489 Düsseldorf
Germany



© 2021 - Distributed by Moree Germany GmbH.
Design Patented. Products are subject to change.


Refer to our website for the latest information about our products.

ML 44-01-01 ISA-BELLE Solar Lamp EN V1 ©2021 Moree Germany GmbH

ISA-BELLE

INSTRUCTION MANUAL (EN)

Model 44-01-01 Designed by Moree in Germany

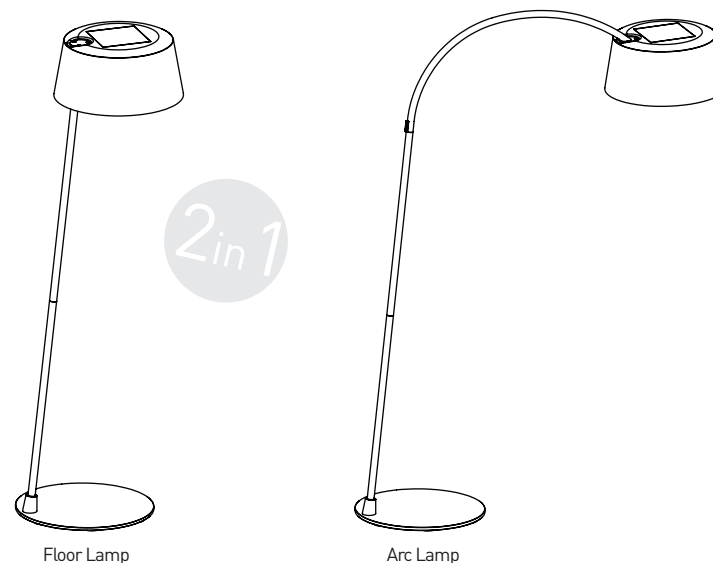

Solar Panel



USB Port



Product with Battery



LEDs dimmable



LEDs warm white



For outdoors

DELIVERY SCOPE

- Isa-Belle Solar Lamp
- USB Adapter
- Micro USB Cable
- Manual
- Assembly Manual

FUNCTIONS

- ON/OFF Switch (red=charging, red off=charged)
- Dimmable
- DUAL CHARGING (via Solar Panel & Adapter)
- Outdoor Use



Please read the instruction manual fully before using the product. Keep the manual for the entire life of the product. Before use, charge the battery fully. If the product is stored for longer than 5 months, make sure to charge it fully again.

moree®
GERMANY

EN - INSTRUCTION MANUAL

Dear customer,
we are delighted that you have chosen a Moree product.

⚠ SAFETY PRECAUTIONS LED-PRODUCT

Before using the product please read the instruction manual fully and keep it for the entire life of the product.

⚠ USE IN ACCORDANCE WITH PURPOSE

- THIS PRODUCT SERVES EXCLUSIVELY LIGHTING PURPOSES AND CAN BE CHARGED VIA ITS SOLAR PANEL OR ADAPTER.
- THE PRODUCT CAN BE USED OUTDOORS.
- The product may only be used when positioned vertically.
- It may only be used on firm ground and should not be covered.
- Avoid dropping or subjecting the product to severe impact.
- If the appliance shows any defect, stop using it.
- Do not alter the product in any way. Faulty or unqualified repair work may cause injury to the user.
- Keep product, batteries and packaging away from children and infants. Risk of accidents, choking or suffocation may occur.

⚠ CHARGING VIA SOLAR PANEL & ADAPTER

- THE PRODUCT IS CHARGED OUTDOORS BY THE SOLAR PANEL.
- THE PRODUCT MAY ONLY BE CHARGED IN DRY ROOMS VIA THE ADAPTER.
- Before charging the product ensure there are no liquids or obstructions entering the charging point or the product.
- Do not allow dirt or metal objects (such as keys) to come into contact with the charging point.
- For charging remove cap and insert the plug of the USB-cable.
- Before use charge the battery fully.
- Red glow on the ON/OFF switch indicates charging, Red glow off indicates fully charged.
- UNPLUG THE ADAPTER FROM THE POWER OUTLET AFTER RECHARGING IS COMPLETE.
- The product may only be charged with the supplied adapter.
- Make sure your socket voltage corresponds to the voltage printed on the adapter.

⚠ MAINTENANCE

- Replace damaged components only with specific ones that are available from the manufacturer.
- Disconnect the product from the mains supply before opening.
- Never pull on the cable! Always pull on the plug.
- The appliance must be disconnected from the power supply when removing the battery.
- Repairs & replacements must be performed by qualified personnel.


LIGHT SOURCE REPLACEMENT

The LED light source of this product cannot be replaced by the user, and can only be replaced by the manufacturer or service provider.

TECHNICAL DATA

Dimensions Arc Lamp:	W145x D48 x H190 cm
Dimensions Floor Lamp:	W58x D48 x H172 cm
Material/Color Stand:	Steel powder coated, grey
Material/Color Cover:	PE, Plastic Fabric, grey
Weight:	20 kg
Illuminant:	LEDs /800 lm /MAX 8 Watt
LED-Colour:	Warm white, 2700 k
Lithium Battery:	3x 2200 mAh, replaceable
Charging Time Adapter:	Approx. 10 h
Charging Time Solar:	Approx. 12-16 h (in Sunshine)
Operating Time:	Approx. 7 h (at 100% LED brightness) Approx. 9 h (at 70% LED brightness) Approx. 14 h (at 35% LED brightness) Approx. 18 h (at 20% LED brightness)
IP 44:	For outdoor Use
Protection class:	III LED Lamp
Adapter:	100-240 V, 50/60 Hz, Vout 5 V, 1.2 A

CONSTRUCTION DIAGRAM

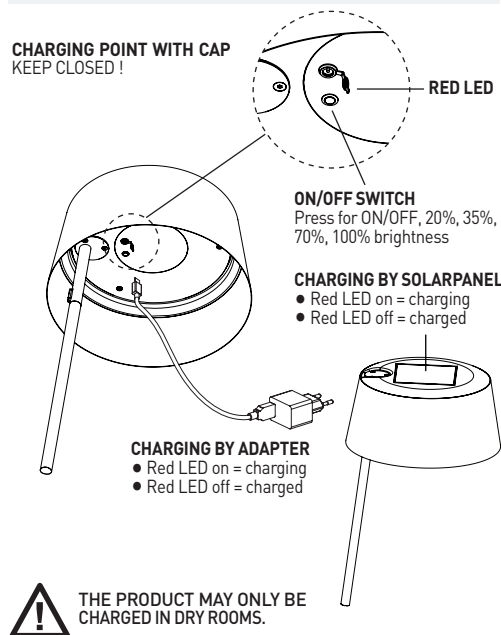

LIGHT SOURCE REPLACEMENT

The LED light source of this product cannot be replaced by the user, and can only be replaced by the manufacturer or service provider.

⚠ SAFETY PRECAUTIONS - ADAPTER

Attention! The unit is supplied with hazardous mains voltage (230 V~). Leave servicing to skilled personnel only. Unqualified handling may cause an electric shock hazard. Improper opening of the device, other tampering or changes to the device will void the warranty.

- Use only recommended power sources.
 - Only use the unit for recharging the LED product.
 - THE ADAPTER IS SUITABLE FOR INDOOR USE ONLY.
- Protect it against any water contact, high air humidity and heat.
- Do not allow dirt or metal objects (such as keys) to come into contact with the adapter terminals or plug. This could result in fire, electrical shock or other damage.
 - UNPLUG THE BATTERY ADAPTER FROM THE POWER OUTLET AFTER RECHARGING IS COMPLETE, OR WHEN YOU ARE NOT USING IT.
- Do not operate the unit or immediately disconnect it from the mains socket if:

1. there is visible damage to the unit or the mains cable,
 2. a defect might have occurred after the unit was dropped or suffered a similar accident,
 3. malfunctions occur.
- In any case the unit must be repaired by qualified personnel.
 - Never pull the mains cable to disconnect the mains plug from the socket, always pull the plug.
 - No guarantee claims for the unit and no liability for any resulting personal damage or material damage will be accepted if the unit is used for other purposes than originally intended, if it is not correctly connected, operated, or not repaired in a professional way.
- Operation:
To charge the battery, first plug the adapter into the charging point and then connect the charging plug to the power supply. The charging time depends on the capacity and the charging status of the battery.

⚠ SAFETY PRECAUTIONS - BATTERY

The battery must only be changed by qualified personnel using the same battery type!

- The product may only be charged with the supplied adapter.
- The appliance must be disconnected from the power supply when removing the battery.
- Do not attempt to disassemble, alter or apply heat to the battery!
- In case of leakage, do not allow liquid to come into contact with skin. If liquid is spilt on clothes or skin immediately wash off with water. Should problems occur, contact a doctor.

Charging the battery:

To charge the battery, first plug the adapter into the charging point and then connect the charging plug to the power supply.

In order to maintain a longer battery life, please comply with the following instructions when using this product:

- Before use charge the battery fully.
- If the ambient temperature is below 0°C or above 40°C, the capacity of the battery decreases.
- At below 25°C the product can be stored for 5 months, before storage the battery should be charged.
- If the battery is quickly depleted even after charging, it has reached the end of its life span. Replace the battery.

TROUBLESHOOTING

1) THE DEVICE DOES NOT WORK

- a) When the battery is empty
 - To charge, place the luminaire in daylight, avoid shading
 - Remove the protective cap and insert the plug of the power supply correctly into the charging socket of the LED product!
- b) When the charge is interrupted
 - Make sure the adapter is correctly plugged into the socket of the product!

Red glow next to the ON/OFF switch indicates charging.

DISPOSAL/ ECOLOGY

Packaging materials and appliance are made from recyclable materials. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. When the appliance is to be no longer used please dispose of the appliance in the proper manner.



This Symbol on the product indicates that it should not be disposed in the normal household waste. Please take it to a recycling point for electrical and electronic appliances to be recycled in a proper manner.

Also rechargeable batteries which are dead or defective should not be disposed of in the household rubbish; always take them to a special waste disposal and make an important contribution to protecting our environment.

The battery must be removed from the appliance before it is disposed of. IMPORTANT: The appliance must be disconnected from the power supply when removing the battery. The battery is to be disposed of safely. Please obtain information on disposal from your local authority

ORIGINAL PACKAGING

The device can be safely transported in the original packaging. If insufficient protective packaging is used, the customer is liable for any damages during transportation. Please keep the original packaging and use it, if possible, in case of warranty, or return of the equipment.

DECLARATION OF MANUFACTURER

Hereby, Moree Germany GmbH declares that the device is in compliance with the essential requirements and other relevant European regulations.

The declaration of conformity can be requested at the following address: INFO@MOREE.DE.