


Ethnicraft

ASSEMBLY INSTRUCTIONS FOR TABLE INSTALLATION

OAK TORSION DINING TABLE Ø90 / Ø127

CODE	DESCRIPTION
50012	OAK TORSION BLACK DINING TABLE 127/127/76
50013	OAK TORSION BLACK DINING TABLE 90/90/76
50018	OAK TORSION DINING TABLE 90/90/76
50019	OAK TORSION DINING TABLE 127/127/76
50036	OAK TORSION DINING TABLE 90/90/69
50038	OAK TORSION BLACK DINING TABLE 90/90/69

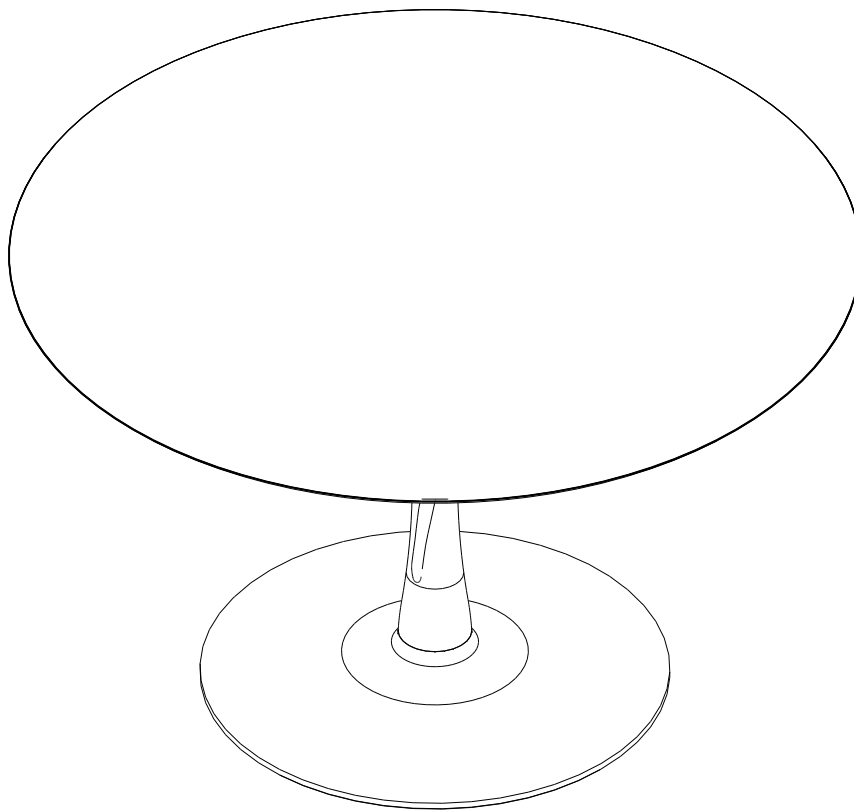


OAK TORSION DINING TABLE Ø90 / Ø127

ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION



NOTE

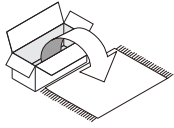


- CAREFULLY OPEN THE CARTON,
- REMOVE CONTENTS AND LAY OUT ON CARPET OR THE PACKAGING CARTON BOX OR OTHER PROTECTIVE SURFACE TO AVOID DAMAGE.
- CHECK PACKAGE CONTENTS TO ASSURE ALL THE NECESSARY HARDWARE AND PARTS ARE RECEIVED UNDAMAGED.
- DO NOT USE DAMAGE OR DEFECTIVE PARTS/HARDWARE.
- CONTACT ETHNICRAFT FOR ANY MISSING PART AND /OR HARDWARE.



- READ THE ASSEMBLY INSTRUCTION BEFORE INSTALLATION AND CAREFULLY FOLLOW THE INSTRUCTION GIVEN.
- SEEK THE ADVICE OF A PROFESSIONAL IF YOU ARE NOT FAMILIAR WITH THESE INSTALLATIONS OR HAVE ANY DOUBTS ABOUT THE SAFETY OF THIS INSTALLATION.




- IT IS ADVISABLE TO DO THIS ASSEMBLY WITH MINIMUM OF 2 PERSONS.

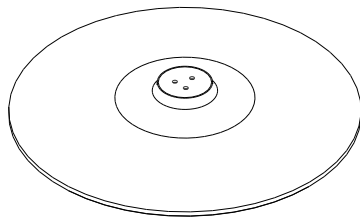

C LEG BASE 1piece

CODE	DESCRIPTION
P4639	LEG BASE - BLACK FOR TABLE Ø127
P4662	LEG BASE - BLACK FOR TABLE Ø90
P4665	LEG BASE FOR TABLE Ø90
P4659	LEG BASE FOR TABLE Ø127

PARTS TO ASSEMBLE

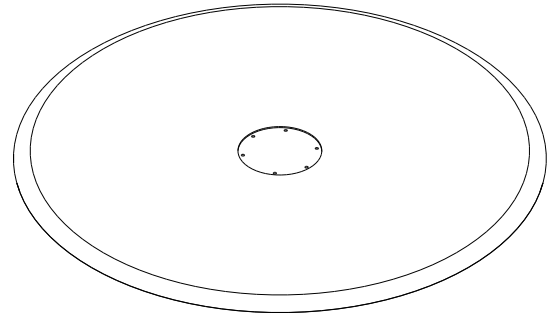

A TABLE TOP 1piece

CODE	DESCRIPTION
P4644	TABLE TOP - BLACK Ø127
P4660	TABLE TOP - BLACK Ø90
P4663	TABLE TOP Ø90
P4658	TABLE TOP Ø127



B CENTER LEG 1piece

CODE	DESCRIPTION
P4643	CENTER LEG - BLACK FOR TABLE Ø127 (HEIGHT 70)
P4661	CENTER LEG - BLACK FOR TABLE Ø90 (HEIGHT 70)
P4664	CENTER LEG FOR TABLE Ø90 (HEIGHT 70)
P4569	CENTER LEG FOR TABLE Ø127 (HEIGHT 70)
P5011	CENTER LEG FOR TABLE Ø90 (HEIGHT 69)
P5013	CENTER LEG - BLACK FOR TABLE Ø90 (HEIGHT 69)

HARDWARE (Attached to Leg Base)

H0840 METAL PLATE (Small) (1pc)	H0839 METAL PLATE (Large) (1pc)
H0841 COUNTERSUNK ALLEN SCREW M8x80 (3pcs)	

HARDWARE ENCLOSED

H0842 COUNTERSUNK ALLEN SCREW M8x16 (9pcs)
--


TOOL (Included in package)

H0880 L KEY (1pc)


SYMBOLS




DIRECTION


NUMBER OF
PERSONS NEEDED



USE HAND

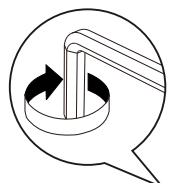
USE L KEY
TO TIGHTEN

A. DISMANTLING METAL PLATE & SCREWS FROM LEG BASE

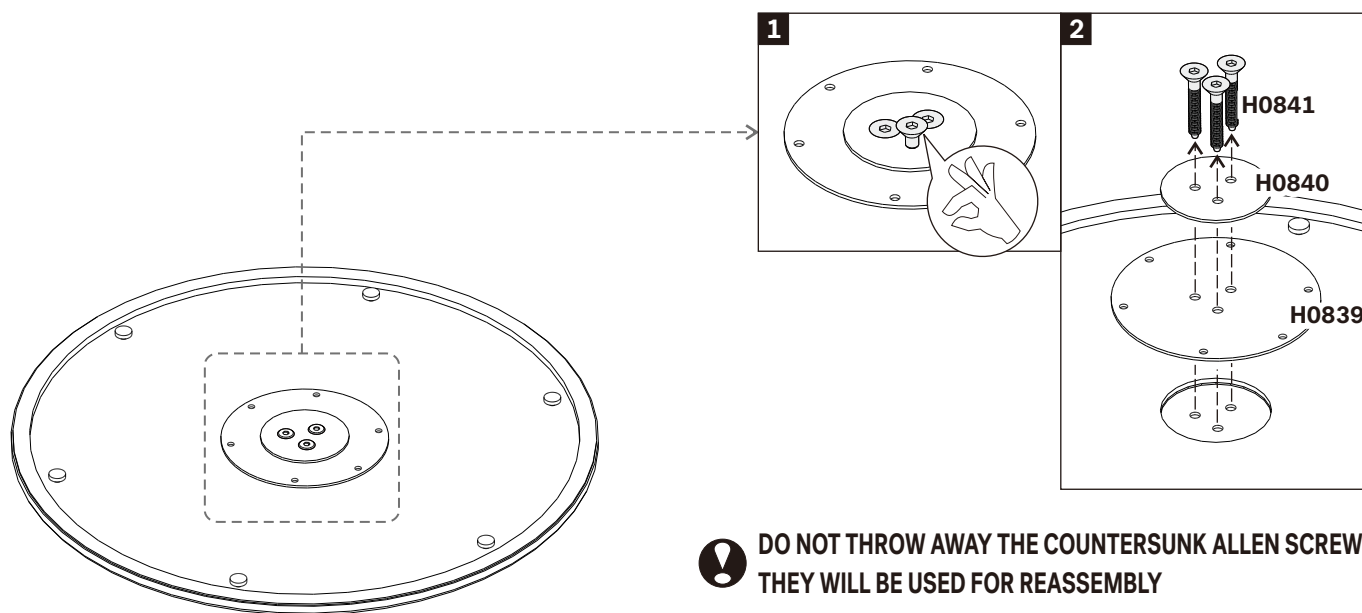

B. INSTALLING METAL PLATE (LARGE) TO THE CENTER LEG

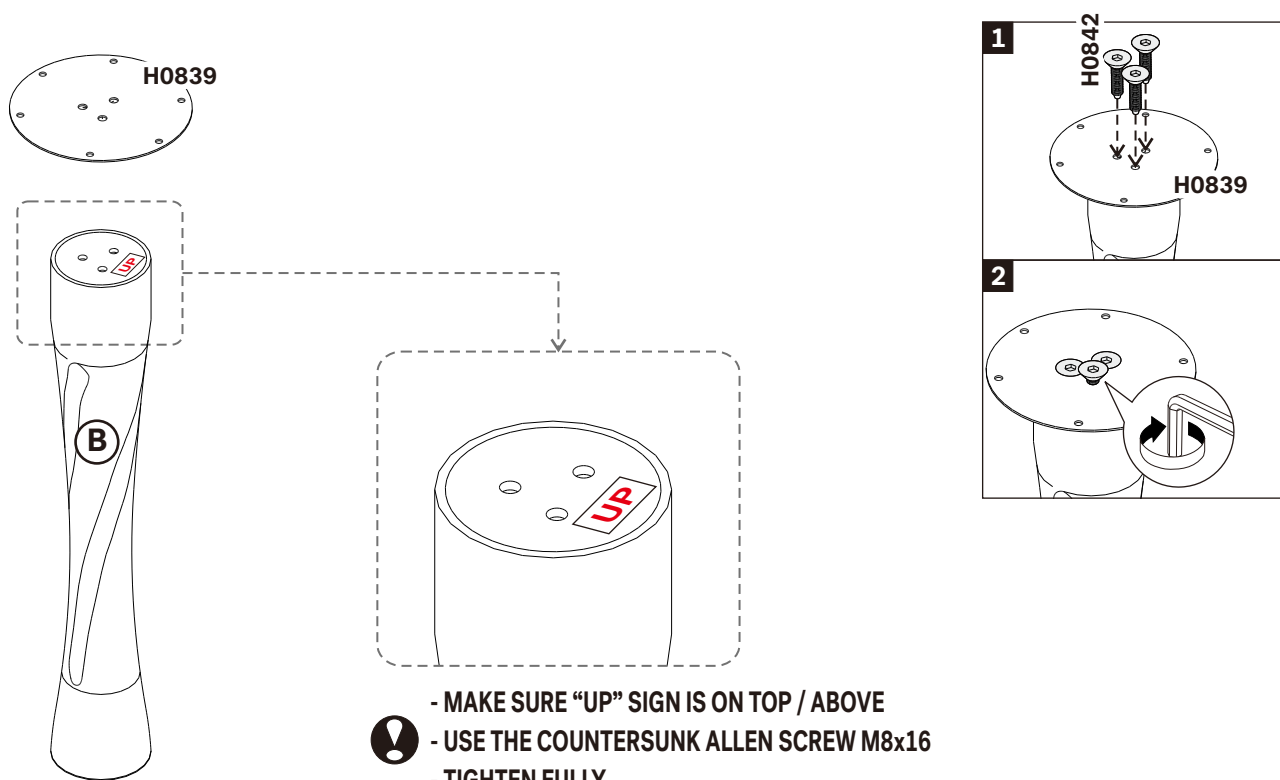


OAK TORSION DINING TABLE Ø90 / Ø127

ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION



C. INSTALLING CENTER LEG TO TABLE TOP

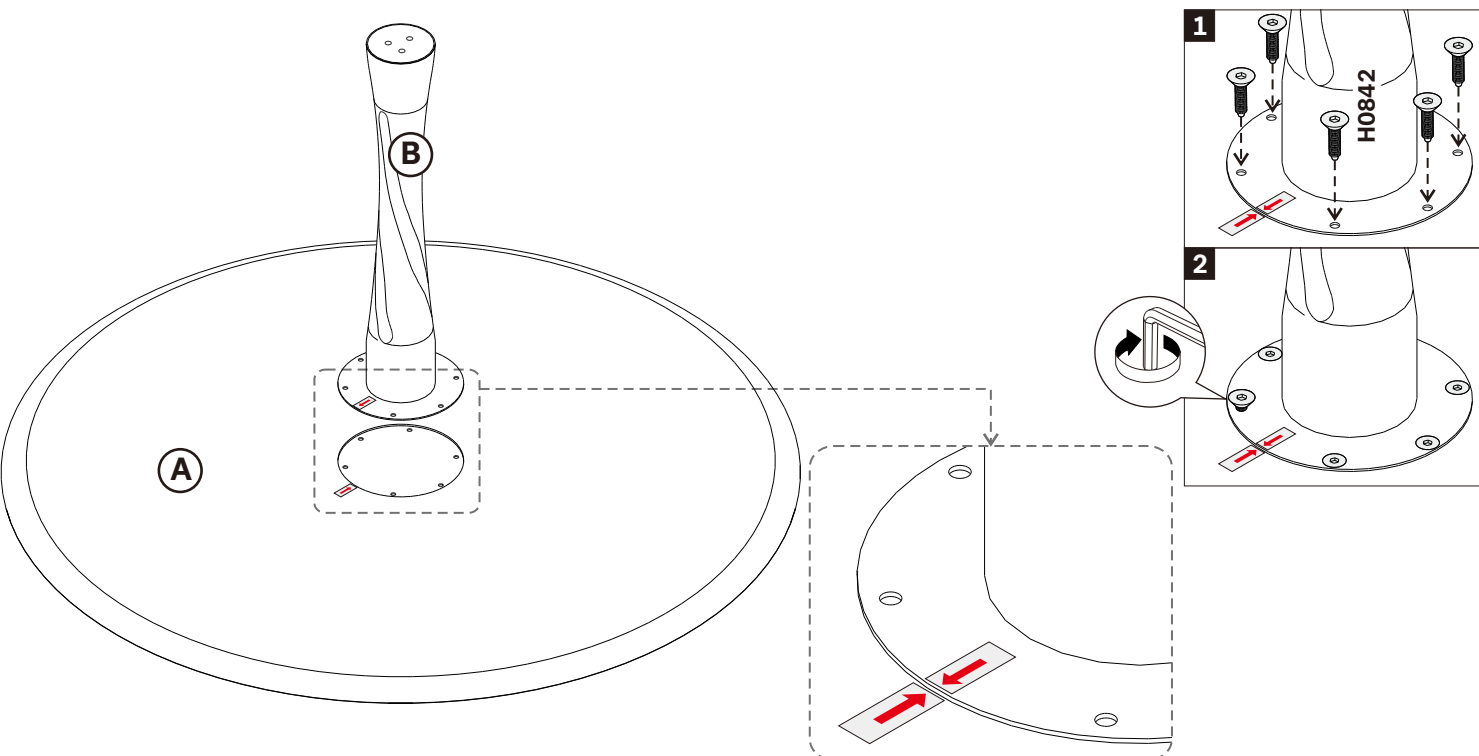



- ALWAYS REFER TO STICKER



- USE COUNTERSUNK ALLEN SCREW M8x16

- TIGHTEN FULLY

D. INSTALLING LEG BASE

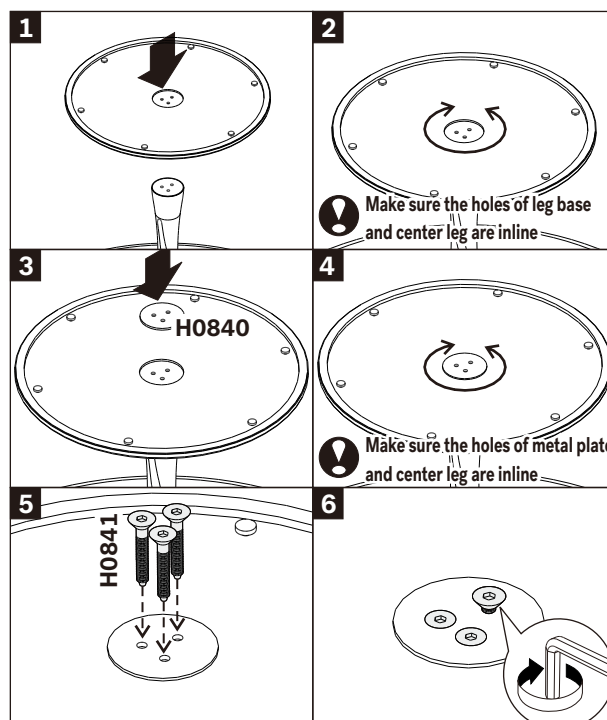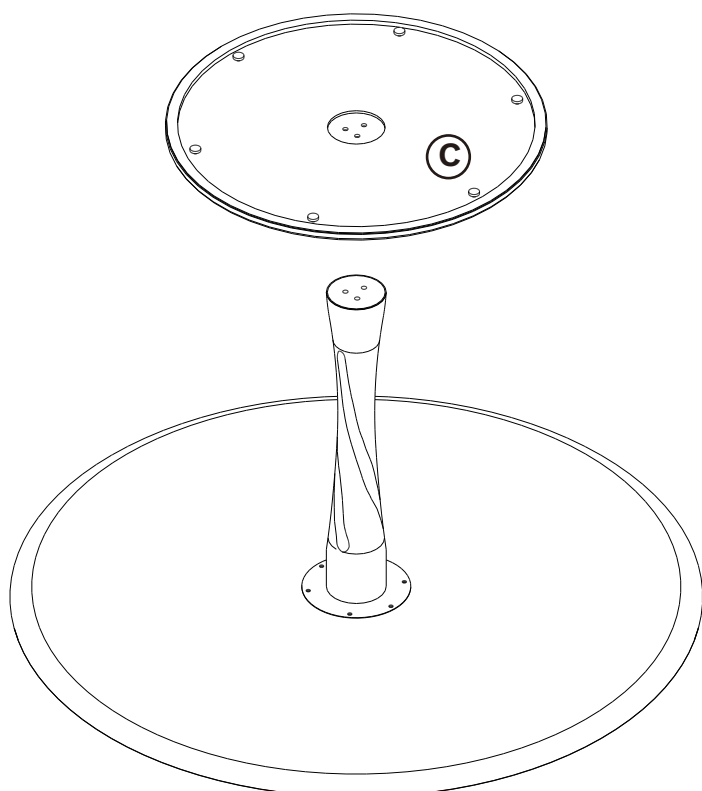

- USE COUNTERSUNK ALLEN SCREW M8x80





- TIGHTEN FULLY

OAK TORSION DINING TABLE Ø90 / Ø127

ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION



E. ADJUSTING RUBBER PAD

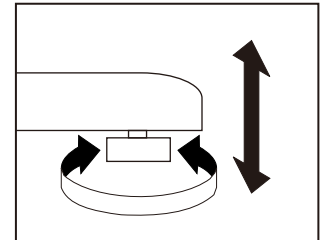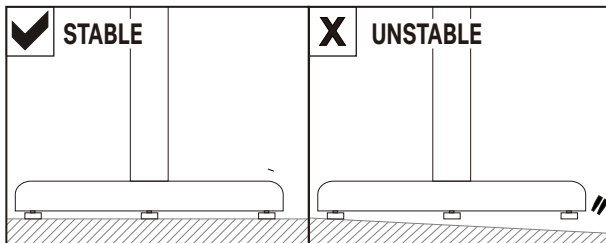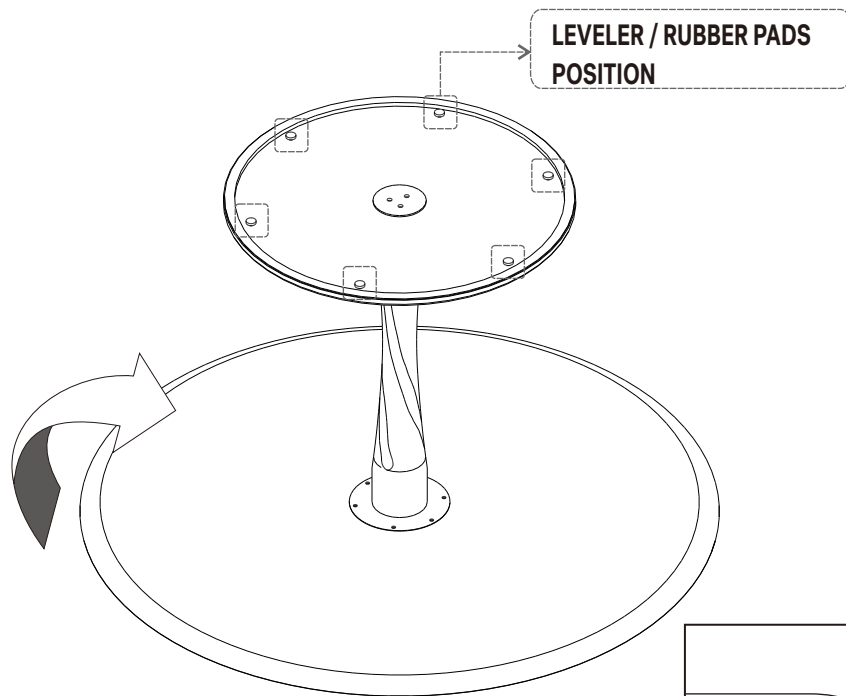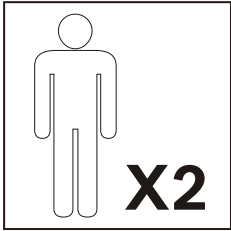

NOTE :
THIS IS A COMPULSORY ACTION TO MAKE SURE
ALL OF THE RUBBER PADS TOUCH THE GROUND!

F. FINISH

